




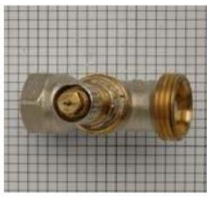











Overview of Radiator Thermostat Valves

1. The following information will help you find the corresponding valve types for use with the supplied adapter.

You can use the Smart Home radiator thermostat with 99% of current thermostatic radiator manufactures in the UK without the need of an adapter on your radiator.

To confirm, please dismantle the current thermostatic head on your radiator thermostat and align with the valve types listed below.

Valve types				Producer	Connection/ Thread	Adapter
front	Side	Side	Slant front			
				Danfoss RA	20 mm bzw. 23 mm with 4 notches	Adapter included  
				Danfoss RA	20 mm bzw. 23 mm with 4 notches	Adapter included  
				Danfoss RAVL	25,5 mm with 4 notches	Adapter included  
				Danfoss RAV	34 mm with 4 notches	Adapter included  

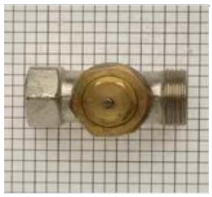


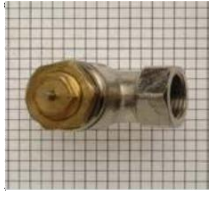


For an overview of all types of valves, which do not require an adapter during assembly, please refer to this document on page 5.

2. If another adapter is required, you will find an overview here:

Valve types				Producer	Connection/ Thread	Adapter*
front	From the side	From the side	Slant front			
				Comap	Thread M28 x 1,5 to M30 x 1,5	 
				Herz	Thread M28 x 1,5 to M30 x 1,5	 
				Ista	Thread M32 x 1,0 to M30 x 1,5	 
				Markardys	Thread M28 x 1,5 to M30 x 1,5	 
				Markardys	Thread M28 x 1,5 to M30 x 1,5	 
				Ondal	Thread M38 x 1,5 to M30 x 1,5	 


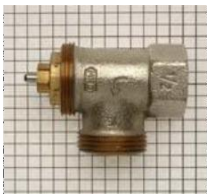



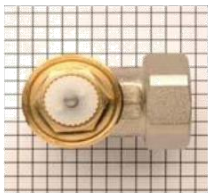
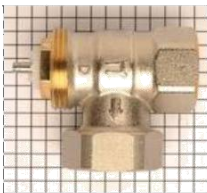

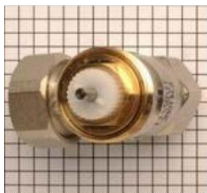




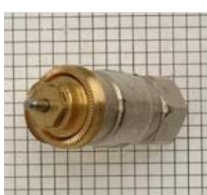


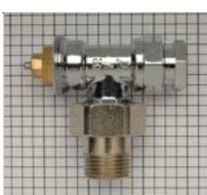
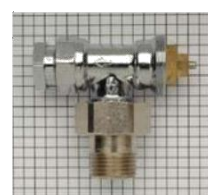


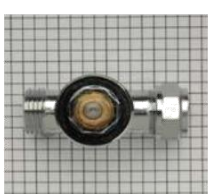




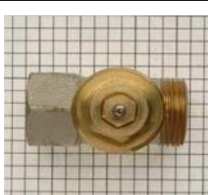


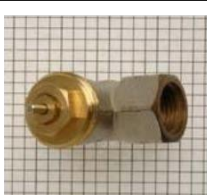

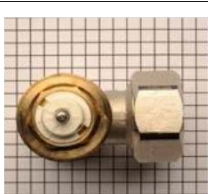
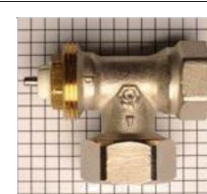

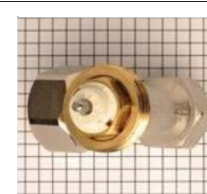

*available from your retailer

				Oventrop	Thread M30 x 1,0 to M30 x 1,5	
				Pont a Mousson	Thread M28 x 1,5 to M30 x 1,5	
				Remagg	Thread M28 x 1,5 to M30 x 1,5	
				Rossweiner	Thread M33 x 2,0 to M30 x 1,5	
				Rotex u. a.	Thread Gewinde M30 x 1,0 to M30 x 1,5	
				Sam bzw. Slovarm	Thread M28 x 1,5 to M30 x 1,5	
				TA	Thread M28 x 1,5 to M30 x 1,5	

				Vailant	30,5 mm to M30 x 1,5	 
---	---	---	--	---------	----------------------------	--

3. Following you find all types of valves for which you do not need an adapter:

Valve types				Producer	Connection/ Thread	Adapter
front	side	side	Slant front			
				Comap	Thread M30 x 1,5	No Adapter needed <input checked="" type="checkbox"/>
				Heimeier	Thread M30 x 1,5	No Adapter needed <input checked="" type="checkbox"/>
				Honeywell- Braukmann	Thread M30 x 1,5	No Adapter needed <input checked="" type="checkbox"/>
				Idmar	Thread M30 x 1,5	No Adapter needed <input checked="" type="checkbox"/>
				Jaga	Thread M30 x 1,5	No Adapter needed <input checked="" type="checkbox"/>
				Junkers	Thread M30 x 1,5	No Adapter needed <input checked="" type="checkbox"/>

				MNG	Thread M30 x 1,5	No Adapter needed	
				Orkli	Thread M30 x 1,5	No Adapter needed	
				Oventrop	Thread M30 x 1,5	No Adapter needed	
				Pegler	Thread M30 x 1,5	No Adapter needed	
				Pegler	Thread M30 x 1,5	No Adapter needed	
				R.B.M	Thread M30 x 1,5	No Adapter needed	
				Rossweiner	Thread M30 x 1,5	No Adapter needed	

				Schlösser	Thread M30 x 1,5	No Adapter needed	
				Siemens	Thread M30 x 1,5	No Adapter needed	
				Simplex	Thread M30 x 1,5	No Adapter needed	
				Tiemme	Thread M30 x 1,5	No Adapter needed	
				Valf Sanayii	Thread M30 x 1,5	No Adapter needed	
				Watts	Thread M30 x 1,5	No Adapter needed	